

# Sunrise System® Dawn Simulator

the natural, stress free way to wake up



[www.morningsunrise.com](http://www.morningsunrise.com)

**SRS**

## **WARNING**

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture

## **CAUTION\***

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



\* A Caution Marking is located on the bottom of this appliance.

**CAUTION - TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICING TAKE PRODUCT TO QUALIFIED SERVICE PERSONNEL**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

## **IMPORTANT SAFETY INSTRUCTIONS**

1. Read these instructions.
2. Keep these instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a damp cloth.
7. Do not block any of the ventilation openings. Use in accordance with the manufacturers instructions.
8. Do not place near any heat sources such as radiators, heaters, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not disregard the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked upon or pinched, particularly at sockets and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel or the manufacturer. Your warranty may be affected if you dismantle the product. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug damage, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, the apparatus does not operate normally or has been dropped.

## **Introduction**

### **Product features**

### **Important safety information**

### **Sunrise System front and LCD display**

### **Setting up instructions**

### **Programming table**

### **Troubleshooting tips**

### **Support and warranty**

### **Technical specifications**

## **Sunrise S**

## **Introduction**

Thank you for purchasing the Sunrise System. You will enjoy the relaxation benefits and many stress free ways of awakening. The sunrise and sunset. The sunrise brightens the room, the sunset slowly dims the room, helping the body wake up. The SRS 260 has a built in stereo AM/FM radio. The SRS 260 has a built in stereo AM/FM player with an external card slot which can play music, talking books or a downloaded mp3 file.

To enjoy the full benefits of your Sunrise System, particularly the safety information on page 2. Information at the end of this manual on page 2. The Sunrise System can be set to meet your needs. To look at the full list of features which

## **Product Features**


- Sunrise: simulates a sunrise over a period of 30 minutes. Set to suit your preference.
- Sunset (sleep timer button): simulates a sunset over a period of 30 minutes. Set to suit your preference.
- The SRS 260 has a built in stereo MP3 player. A FREE SD card can be used. Wake up or relax to the sound of the FREE SD card) or your own choice of music.
- SRS 260 comes with a FREE SD card. The SRS 260 can play sea, stream, thunderstorm, whale song, etc.
- Digital FM/AM radio.
- Weather band radio (USA model only).
- The audible wake up can be disabled or set to radio.
- All functions of the Sunrise System 260 can be set to display to clearly show the function

- Full seven day alarm is provided to allow the user to set different times (if desired) on the alarm for different days of the week. The factory programmed time for all seven days is 07:00am.
- A night light feature has also been included and the night light is user adjustable.
- A security feature that randomly turns the lamp full on and off between the times of 8:00pm and 8:00am can be set to operate when you are away from home.
- Power fail backup is provided on all functions for power cuts to the home electricity supply or if the Sunrise System is inadvertently disconnected.
- Easy to read text display shows time and date, MP3 track, radio frequency.
- The day of the week and Leap years are automatically calculated.
- Option to select a language of your choice. Choose between Danish, English, Finnish, Flemish, French, German, Norwegian, Spanish or Swedish.
- Built in 60W light (E14 socket UK, EU & E12 socket USA) use of daylight bulb optional.
- The SRS 260 is supplied with an energy saving halogen light bulb.

### IMPORTANT Safety Instructions

- **NEVER** immerse the Sunrise System or the wiring of the product in water.
- Do **NOT** replace the bulb in the Sunrise System whilst the product is connected to the mains power supply. The Sunrise System will retain all settings if there is no power supply to the clock.
- Use **ONLY** regular tungsten light bulbs or tungsten halogen light bulbs. Do **NOT** use energy saving fluorescent bulbs or non standard bulbs.

### Sunrise System 260 Front and LCD Display Layout

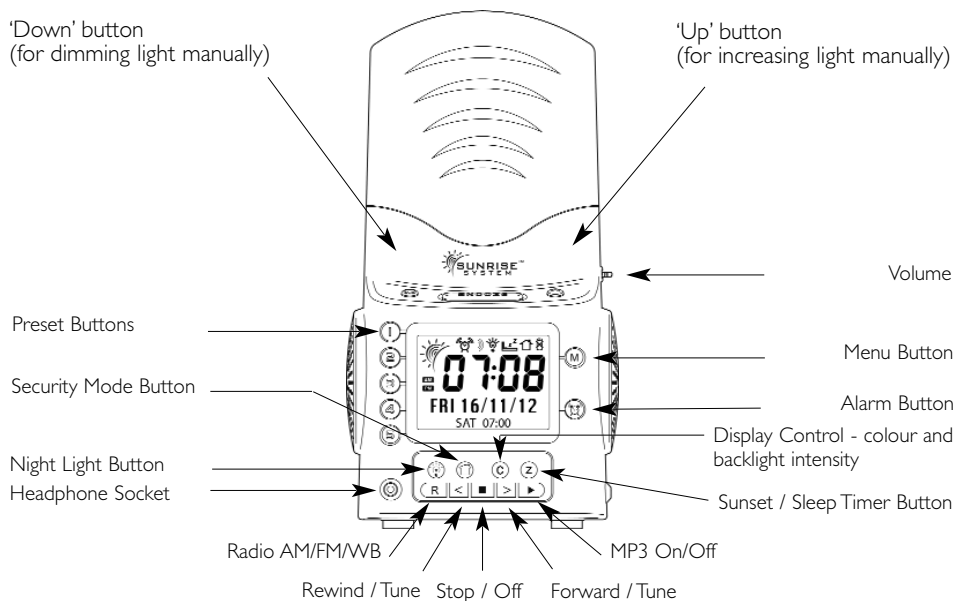

'Down' button  
(for dimming lamp manually)

Snooze  
to con  
buzzer  
switch

### Setting Up and Using the Sunrise System 260

#### Setting the Language

When the SRS 260 is plugged in for the first time, the user can set the language. The display will show the language up or down buttons to select the required language. Press the Snooze button and date or press SNOOZE to exit the menu. If the language is not set, a factory reset must be performed.

**Please Note:** The SRS 260 will come on for 12 seconds or if you press the zzZ (Snooze) button.

#### Setting the Time

Press the MENU button until the display shows the current time. The current time will also be shown on the display. Press the up or down buttons to set the clock in 1 minute increments or 10 minute increments. Press the Display button to exit the menu.

#### Setting the Alarm or Sunrise Time

The Sunrise System 260 can be set to a natural light progression of the 's' or 'sig' gradually, gently waking the sleeper. To set the alarm time, the display shows MONDAY ALARM TIME. Momentarily press the light up or down buttons to set the time. Press the up or down buttons and hold the up or down buttons to set the time for each day of the week.

#### Setting the Date

Press the MENU button until the display shows the year segment flashing. Momentarily press the up or down buttons to quickly set the year. Press the up or down buttons and hold the up or down buttons to quickly set the month and date, the display will show MONTH. To change the date format from European to US, press the DISPLAY button once whilst setting up the date. **Please Note:** The weekday and Leap year are automatically calculated, so there is no need to adjust them manually.

Press the MENU button until the display shows 15 MINUTES SUNRISE for example. The Sunrise duration can be set to 15, 30, 45, 60, 75 or 90 minutes. See Setting a Wake Up Sound instruction later in the user guide if you like to wake up with Sunrise and Sound.

Press the SNOOZE button or wait 12 seconds.

Momentarily press the NIGHTLIGHT button to enable the Night Light, the display will show NIGHTLIGHT ON and the Night Light icon will be displayed. To disable the Night Light press the NIGHTLIGHT button momentarily. Press the NIGHTLIGHT button again the display will show NIGHTLIGHT OFF and the Night Light icon will no longer be displayed.

Please Note: When the Night Light is enabled it will not be possible to dim the light below the preset Night Light level.

First ensure the Night Light is off (see above). Press the light up or down buttons to brighten or dim the attached lamp at the required light level then press and hold the NIGHTLIGHT button for approximately 2 seconds until the display will show NIGHTLIGHT LEVEL for 2 seconds and the new setting will be stored.

**Please Note:** If the Night Light is on it will not be possible to set the Night Light level.

Press the light up or down buttons to set the lamp to the required light level. If the Sunrise has not started or the alarm is not activated pressing the SNOOZE button will switch the lamp on at full brightness or off if the lamp is already on, the display will show LAMP ON or LAMP OFF.

Press the **DISPLAY** button, the display will show **BACKLIGHT** together with the current backlight intensity setting. To adjust the display backlight intensity press the light up or down buttons within 5 seconds while the display is showing **BACKLIGHT**.

Press the DISPLAY button again to cycle through the available backlight colours. To enter a colour change mode, (where colour of backlight changes randomly) press and hold the DISPLAY button until the display shows RANDOM BACKLIGHT. To cancel the random backlight mode, press the DISPLAY button again. The display colour and intensity level will return to the setting chosen prior to entering random backlight mode.

Please Note:  
The backlight intensity cannot be adjusted whilst the random backlight mode is active.

Security mode switches the lamp on and off at random times between 8pm and 8am. To enable this feature simply press the security button with the house icon, located on the front panel. The display will show SECURITY ON for 2 seconds, the security house icon will be visible on the display if security is set to ON.

**NOTE:** If the alarm is ON (indicated by the alarm clock icon on the display) it is not possible to set the security mode.

The SRS 260 can accept SD and SDHC card into the side of the SRS 260 with down, pressing inward with a light press clicks into place, the display will show R typically takes about 2 seconds but could minute with some cards. If the display says ERROR then ensure the card is correct card contacts are clean also ensure the correctly and that there are MP3 tracks Please Note: The card must be formatted FAT32 and contain .mp3 files in the root of the card. MP3 tracks in separate folders be ignored.

Press the MP3 button to begin playing automatically. If the display shows INSERT CARD, The display will show MP3 PLAYER toggle. example song title, artist and composer TITLE. Providing the media card has not disconnected the MP3 will begin playing current MP3 track being listened to, more select a previous or next MP3 track or MP3 tracks. The display will show the current example: 00003 / 00040 would indicate

To stop the MP3 playback press the STOP button.

Press the AM/FM button to switch on the  
and tuned frequency that was selected.  
The display will show the selection, 87.5

\* Note: Weather band is only available

To switch off the radio press the STOP

Switch on the AM/FM radio by pressing tune < or > buttons. Next press and hold PRESET STORED for 2 seconds.

**NOTE:** If the preset was previously assigned, the radio will tune to that preset. The FM band has 5 presets and the AM

Press and hold one of the preset buttons  
PRESET STORED for 2 seconds.

**NOTE:** If the preset was previously assigned it will be overwritten by the new track number.  
The MP3 has 5 presets.

**Recalling Presets AM/FM Radio**

Switch on the AM/FM radio by pressing R button then press one of the preset buttons 1 to 5, if the preset has been assigned then the stored station will be tuned.

**NOTE:** If a preset is empty the screen will show PRESET EMPTY.

**Recalling Presets MP3**

Press the MP3 button (triangle) and the MP3 player will start, press one of the preset buttons 1 to 5, if the preset has been assigned the stored file will begin to play.

**NOTE:** If a preset is empty the screen will show PRESET EMPTY.

**Listening Volume**

To adjust the volume turn the volume control wheel on the side of the Sunrise System forward or backward. There are 16 sound levels from zero. If zero sound is selected (no bars) the speakers will be muted.

**Headphone Socket**

**NOTE:** Before connecting headphones turn the VOLUME to a low setting. The headphones must have a stereo 3.5mm plug fitted, DO NOT use a mono plug as damage may occur to the unit. Plug your headphones into the headphone socket on the front of the unit. The speakers will automatically cut out and the sound will be played through the headphones.

**Setting a Wake Up Sound**

The wake up sound will begin when the Sunrise starts and gradually increase in volume reaching the maximum user set volume at the alarm time. You can set the radio or the MP3 pLayer as your wake up sound or choose not to have a wake up sound.

**Setting the radio as a Wake Up Sound**

Switch the radio on and tune it to the desired band AM, FM or WB\* and frequency. Next set the desired maximum volume. Press and hold the ALARM button until the display shows FM RADIO ALARM SOUND ON, for example. The Wake Up sound selection is now stored. The radio can now be switched off if preferred.

\*Note: Weather band is only available on US models.

**Setting the MP3 player as a Wake Up Sound**

There are three MP3 wake up modes:

- 1. Continuous Play. Choose this if you wish the SRS 260 to play from the last track played.
- 2. Repeat Track. Plays from a specific track. Choose this to repeat the same track over and over.
- 3. Repeat Daily. Plays from a specific track each day. Choose this to start from the same track every day.

To play from a specific track, start the MP3 player and select the required track using the forward < or > rewind buttons. Next set the desired maximum wake up volume. Press and hold the ALARM button, the display will show MP3 PLAYER ALARM SOUND. The MP3 Wake Up sound has 3 different options available from the setup menu, see above. Press MENU until the display shows MP3 ALARM SOUND then press the up or down light buttons to select the way you want the Wake Up sound to play, Continuous Play, Repeat Track or Repeat Daily.

**No Wake Up Sound**

Press Stop then press and hold the Alarm

**Activating Alarm / Sunrise**

To enable the alarm, momentarily press the ALARM button together with the alarm day and alarm time buttons to indicate the alarm clock is enabled. The alarm will be in an idle condition, i.e. Not in a Set Up mode. **Please Note: If there is insufficient time set for the following day.**

When the alarm has begun to activate, press the ALARM button to cancel the alarm for the day. The alarm will be in an idle condition.

To switch the alarm clock off (providing the alarm is on), press the ALARM button (press ALARM twice) to set ALARM OFF for 2 seconds and the alarm will be in an idle condition.

When the alarm is on, the alarm day and alarm time are displayed. If the MP3 are off, for example MON 07:00am, the alarm time will be appended to the alarm time for the day. When the alarm is activated the sunrise duration will be displayed. If minutes sunrise duration is selected the alarm will be in an idle condition.

**Sunset (Sleep Timer)**

The sunset duration can be set in increments of 15 minutes. To set the sleep timer, momentarily press the SLEEP button for example. Press repeatedly until the desired duration is displayed. Press the SLEEP button to cancel the sleep timer. If the lamp is on at sunset duration, at the end of this time the lamp will turn off.

Presses of MENU button		Result (First set)
1		CLOCK
2		MONDAY
3		TUESDAY
4		WEDNESDAY
5		THURSDAY
6		FRIDAY
7		SATURDAY
8		SUNDAY
9		MP3 ALARM
10		YEAR
11		MONTH
12		DATE
13		SUNRISE

## Troubleshooting Tips

### Factory Reset Procedure

To reset the SRS 260 back to factory default settings follow the instructions below:

1. Unplug the SRS 260 from the mains supply.
2. Press and hold the MENU button and plug the SRS 260 back into the mains supply while still holding the MENU button.
3. The display will show VERSION 1.00 for example. Now release the MENU button.
4. After a short delay the SRS 260 will start up with defaults loaded.

### How do I generate a Sunrise?

The Sunrise works in conjunction with the alarm time, first set the alarm time (see page 5 ), then choose the desired Sunrise duration from the menu (e.g set to 15 min). Activate the alarm by pressing the alarm button (front right). The Sunrise will start 15 minutes before the alarm time and the lamp will be at full brightness after 15 minutes (when a Sunrise duration of 15 minutes is chosen).

### How do I generate a Sunset?

Press the light UP button until the lamp is set to the desired brightness level or press the zzZ SNOOZE button to turn lamp full on. To activate the Sunset just press the sleep button repeatedly until the desired sunset duration is displayed from 5 - 90mins. The lamp will slowly dim and switch off. The sunset time can be set between 5 - 90 minutes. If the radio or MP3 is playing either will switch off after the sunset period.

### How do I switch the light off after a sunrise?

Press the ALARM button to switch the alarm off, then press the zzZ SNOOZE button to dim the lamp.

### Where can I purchase SD cards and accessories for my Sunrise System?

SD cards, card readers, light bulbs, sleep aids and sleep sound cards are available to purchase online at the Sunrise System webshop: [www.morningsunrise.com](http://www.morningsunrise.com)

### Can I use any light bulb in the lamp of my SRS 260?

No, you must use a regular tungsten or tungsten halogen light bulb up to 60W maximum. The Sunrise System will not work properly if an energy saver or fluorescent bulb is used. A daylight bulb of the correct type may also be used. See technical specification of bulb for UK/EU or US model on page 11. Light bulbs and further info available on the Sunrise System website.

### Sunrise System Support

You can contact the Sunrise System team and find out more about the benefits of using the Sunrise System dawn simulator by visiting our website: [www.morningsunrise.com](http://www.morningsunrise.com)

You will also find a Q&A section on our website.

### Warranty

Gullwing Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of one year from the date of purchase.

Gullwing Ltd. does not accept liability for improper or unintended use of the product. Should you have a problem with your unit, please get in touch with your retailer or contact Gullwing Ltd. via our website or by writing to us.

## SRS 260 Default Settings and

<b>Time and date:</b>	EU/UK Models US Model
<b>Display colour:</b>	White
<b>Display level:</b>	50%
<b>Volume:</b>	50%
<b>FM:</b>	
<b>WB:</b>	US model only
<b>AM:</b>	EU/UK Models US Model
<b>Night Level:</b>	20% approximate
<b>Night Light:</b>	Off
<b>Security:</b>	Off
<b>Alarm Clock:</b>	Off
<b>Alarm Time:</b>	EU/UK Models US Model
<b>MP3 Player:</b>	Maximum bit rate 5 Presets.
<b>Speaker Output:</b>	2.0W RMS (4.0 F
<b>Headphone socket:</b>	3.5mm stereo

### Sunrise System Compliance (USA)

RoHS and WEEE compliant.

### Technical Specifications SRS 260 U

**General:** For use in USA (European model)

**Dimensions:** Approximately 5 1/5" (width)

**Power supply:** 110V-120V AC, 60Hz

**Lamp:** Tungsten bulb only. E12 Screw Can

### Sunrise System Compliance (Euro

RoHS and WEEE compliant.

This equipment complies with the requirements of the EMC Directive.

In demonstration of conformance with the EMC Directive.

Compatibility covered by the above directives.

**Safety** EN 60335-1

**Electro Magnetic** EN 61000-3-2

**Compatibility** EN 61000-3-3

### Technical Specifications SRS 260 U

**General:** For use in Europe. (USA model)

**Dimensions:** 140mm (width) x 270mm (height)

**Power supply:** 230V AC, 50Hz

**Lamp:** Tungsten bulb only. E14 Screw Can

**CE marked.** Complied with EMC (2007/25/EC)

Although every effort is made to ensure the content of this manual is correct, Gullwing Ltd. does not accept liability for any errors or omissions. Updates to this user guide may be found on [www.morningsunrise.com](http://www.morningsunrise.com). Bien que tous les efforts possibles soient entrepris pour assurer l'exactitude des informations contenues dans ce manuel, Gullwing Ltd. ne sera pas tenu responsable en cas d'erreurs ou d'omissions. www.morningsunrise.com

Aunque se ha hecho todo lo posible para garantizar que los contenidos de este manual sean correctos, Gullwing Ltd. no se responsabiliza por los errores u omisiones en este manual. Es posible que se encuentren actualizaciones de este manual en [www.morningsunrise.com](http://www.morningsunrise.com). Obwohl alles versucht wurde, um die Richtigkeit des Inhalts zu gewährleisten, übernimmt Gullwing Ltd. keine Haftung für eventuelle Fehler oder Auslassungen. Überarbeitete Versionen werden auf [www.morningsunrise.com](http://www.morningsunrise.com) veröffentlicht.

© Copyright Gullwing Ltd

**[www.morningsunrise.com](http://www.morningsunrise.com)**

